

PSDesigns E46 / E46M3 and CSL "Ram-Air" Front Scoop..



Kit contents:-

Included:

1 PSDesigns Carbon Fibre Front Air Scoop
Installation Instructions

Required tools/hardware:

Screw driver +
Plastic Rivet removal pry
Power Drill
2 small + drive screws

Process:-



Figure 1

Open the Bonnet and Remove the Front Plastic air duct, to remove the air duct remove the 4 plastic rivets by prying the centre of each up.



Figure 2

Once the air duct is removed locate the protruding plastic tang and trim it flush with the metal slam panel as shown.



Figure 3

Using the ram-air scoop as a guide for width, drill a small pilot hole for the screws to be used to hold the scoop in place. The holes should be at each side of the scoop and through the metal slam panel, as shown.



Figure 4

And the other side.

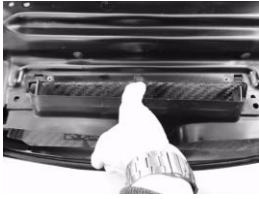


Figure 5

Insert the scoop between the metal slam panel and the plastic radiator cowl as shown.



Figure 6

Using the 2 holes as a guide drill through the front scoop and securely attach with 2 small screws as shown.



Figure 7

Refit the OEM Front plastic Air Duct with the 4 plastic rivets removed in op.1.

Installation Complete.

Thank you for your purchase, we hope you enjoy the product.

Should you have any questions regarding installation please email us at:

info@psdesigns.global and a member of our team will be happy to assist as quickly as possible.